Meijer.com

READ BEFORE USE
LIRE AVANT UTILISATION
LEA ANTES DE USAR

*Visit **www.hamiltonbeach.com** for our complete line of products and Use and Care Guides – as well as delicious recipes, tips, and to register your product online!*

*Rendez-vous sur **www.hamiltonbeach.ca** pour notre liste complète de produits et de nos manuels utilisateur – ainsi que nos délicieuses recettes, nos conseils et pour enregistrer votre produit en ligne !*

*¡Visite **www.hamiltonbeach.com.mx** para obtener nuestra línea completa de productos y las Guías de Uso y Cuidado, además de deliciosas recetas, consejos y para registrar su producto en línea!*

Questions?
Please call us – our friendly associates are ready to help.
USA: 1.800.851.8900

Questions ?
N'hésitez pas à nous appeler – nos associés s'empresseront de vous aider.
CAN : 1.800.267.2826

¿Preguntas?
Por favor llámenos – nuestros amables representantes están listos para ayudar.
MEX: 01 800 71 16 100

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Durathon™ Iron

Fer à repasser
Plancha

Hamilton Beach®

English 2
Français 15
Español 31

Meijer.com

IMPORTANT SAFETY INSTRUCTIONS

When using your flatiron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Only use an iron for its intended use.
2. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
3. Always turn the iron to OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
4. Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord in the provided cord wrap or, if option not provided, coil the cord loosely around the iron for storing.
5. Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
6. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged or there are visible signs of damage or it is leaking. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
7. The iron must be used and rested on a stable surface.
8. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
9. Close supervision is required for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.
10. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.
11. To avoid a circuit overload, do not operate an iron on the same circuit with another high-wattage appliance.
12. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

SAVE THESE INSTRUCTIONS

Meijer.com

OTHER CONSUMER SAFETY INFORMATION

This product is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit into the outlet, have an electrician replace the outlet.

- Use the iron on an ironing board. Ironing on any other surface may damage that surface.
- Do not iron or vertical-steam clothes that are being worn.
- Do not use vertical steam in the direction of people or pets.
- During first use of the iron, it may appear to smoke. This will stop and does not indicate a defect or hazard.
- Many irons spit or sputter during the first few uses with tap water. This happens as the steam chamber becomes conditioned. This will stop after a few uses.
- To clean steam vents before first use, prepare iron for steam ironing and then iron over an old cloth for a few minutes while letting the iron steam. Press the Steam Burst button several times to clean the vents. Then follow the self-cleaning instructions on page 12.

Meijer.com

Parts and Features

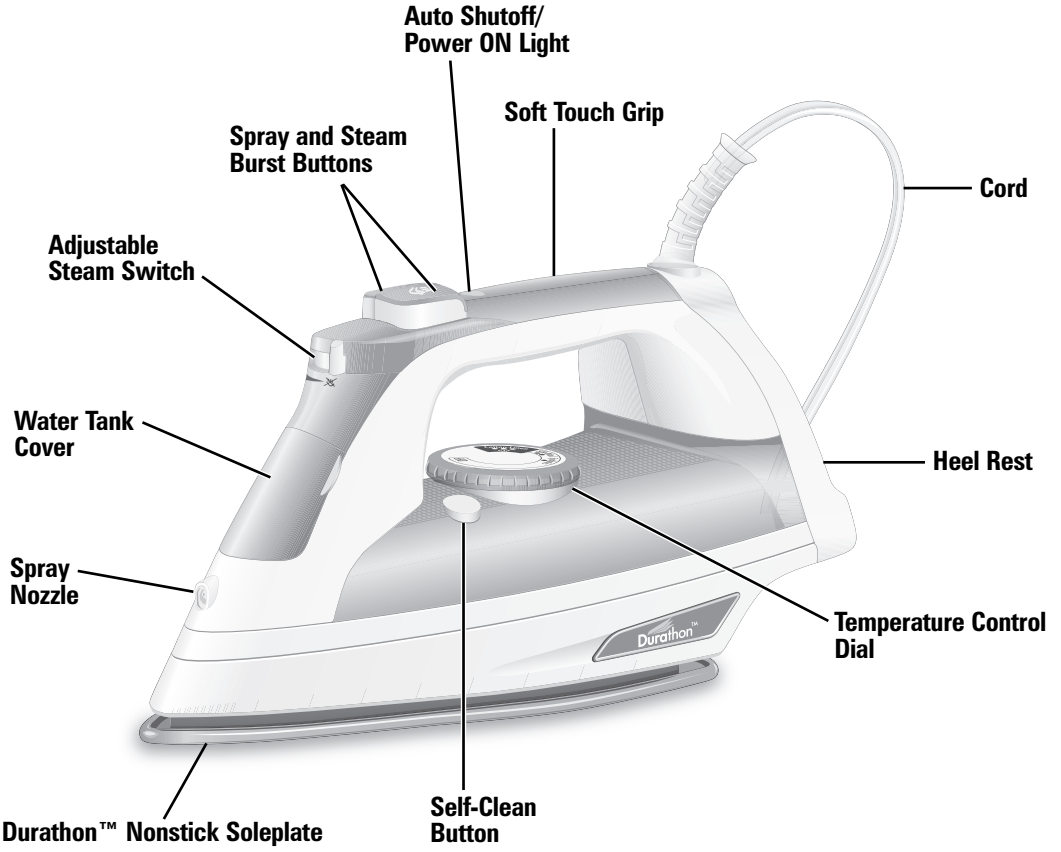

Optional Features
(on select models)

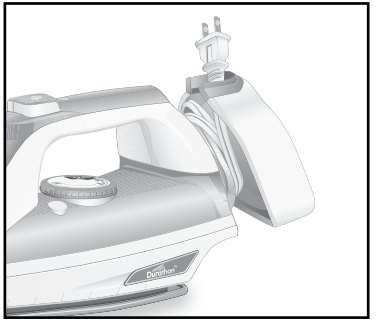

Cord Wrap

Hot Dot Indicator

(refer to page 9 for more information)

Meijer.com

How to Dry Iron

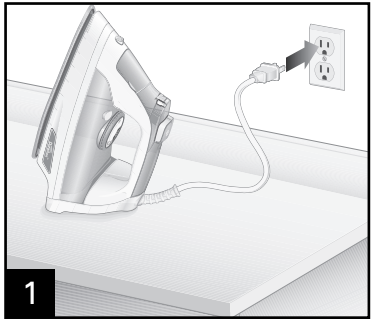

NOTE: Fully unwrap cord from cord wrap if provided.

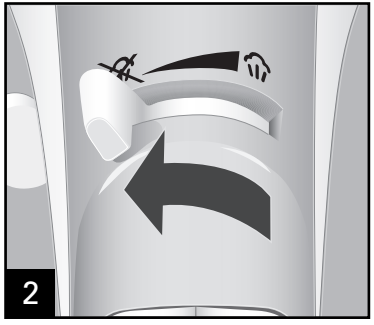

Set the Adjustable Steam Switch to (Dry Iron).

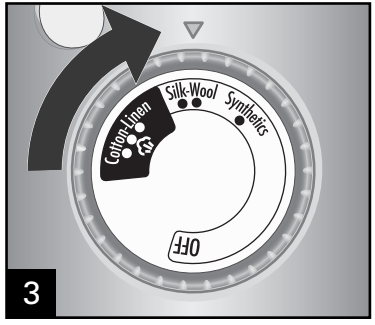

Turn Temperature Control Dial to desired temperature. Allow 2 minutes for iron to reach desired temperature.

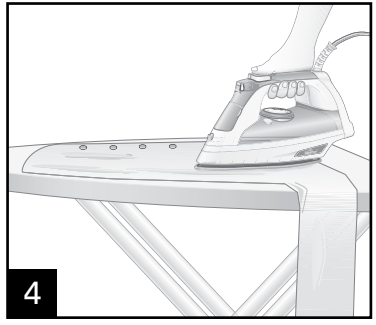

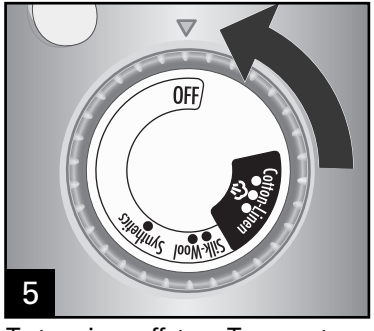

To turn iron off, turn Temperature Control Dial to OFF.

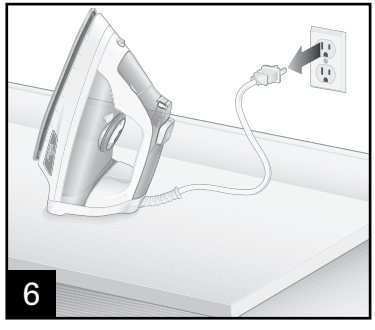

POSITION SENSING/AUTO SHUTOFF

The iron will turn off automatically when left in the following positions. The Auto Shutoff time varies based on the iron's position.

IRON POSITION		MOTIONLESS TIME
Resting on soleplate		30 seconds
Resting on either side		30 seconds
Resting on heel		15 minutes

NOTE: Moving the iron will reset the Auto Shutoff sensor.

Meijer.com

How to Steam Iron

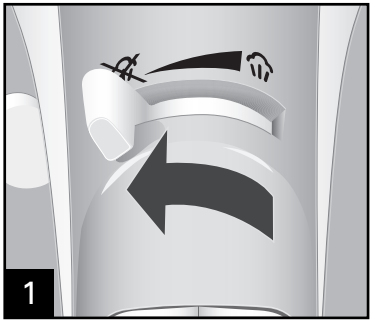

Set the Adjustable Steam Switch to ⁂ (Dry Iron).

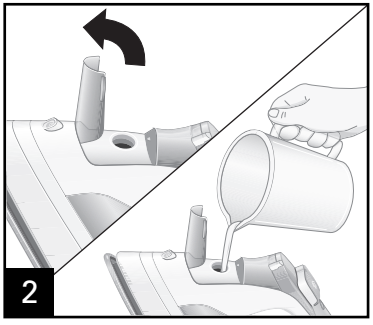

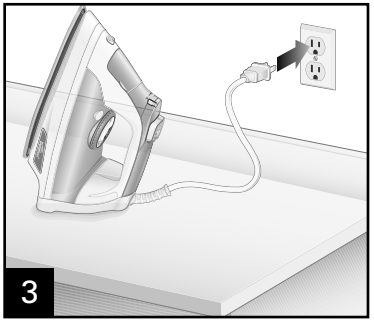

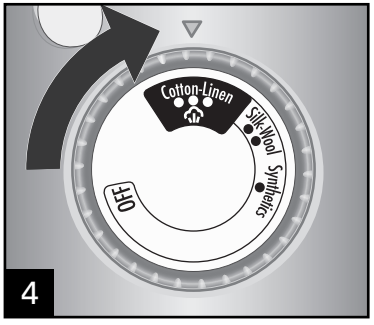

Turn Temperature Control Dial to desired fabric setting in the steam range. Allow 2 minutes for iron to reach desired temperature.

WARNING! Burn Hazard: Attempting to steam iron on a lower temperature setting or failing to allow the iron to preheat for 2 minutes can result in hot water dripping from the soleplate.

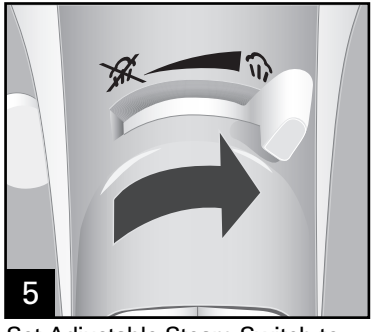

Set Adjustable Steam Switch to the desired steam level.

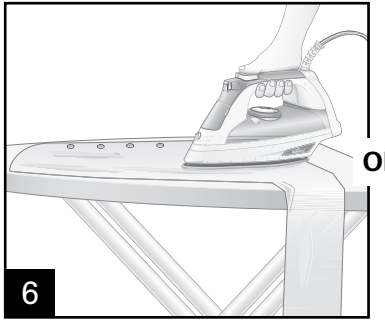

OR

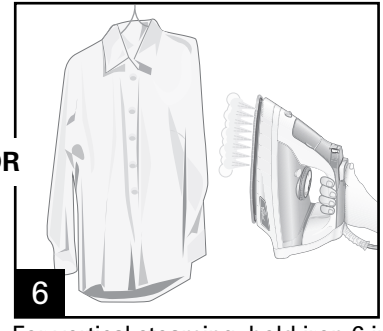

For vertical steaming, hold iron 6 inches (15 cm) from garment and do not allow hot soleplate to touch delicate garments. Press and release the Steam Burst Button to steam out wrinkles. Wait at least 5 seconds before pressing Steam Burst Button again.

Meijer.com

How to Steam Iron *(cont.)*

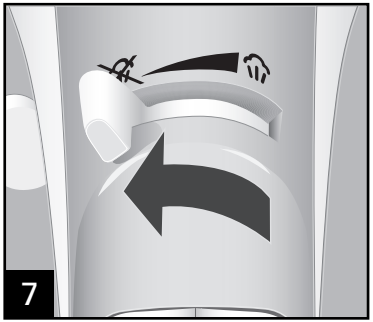

To turn iron off, set Adjustable Steam Switch to (Dry Iron).

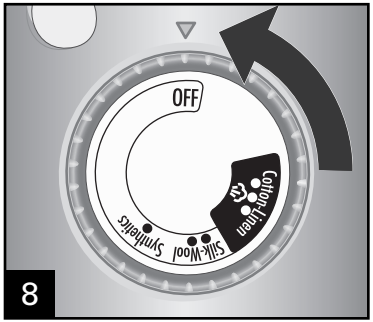

Turn the Temperature Control Dial to OFF.

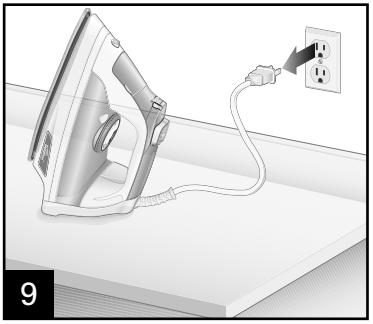

Unplug iron.

POSITION SENSING/AUTO SHUTOFF

The iron will turn off automatically when left in the following positions. The Auto Shutoff time varies based on the iron's position.

IRON POSITION		MOTIONLESS TIME
Resting on soleplate		30 seconds
Resting on either side		30 seconds
Resting on heel		15 minutes

NOTE: Moving the iron will reset the Auto Shutoff sensor.

Meijer.com

Fabric Setting Chart

NOTICE: To avoid garment damage, check garment label for fabric composition and ironing instructions.

Steam Setting	Temperature Setting		Ironing Instructions
Dry Iron	OFF		OFF
	Synthetics	• Low	Dry iron using spray if necessary.
	Silk, Wool	•• Medium	Iron silk on wrong side.
Steam Range	Cotton, Linen	••• High	For cotton, iron while still damp or use spray. For linen, iron fabric on wrong side.

Garment Label Symbols

Fabric care labels on garments have symbols that show ironing instructions and recommended temperature settings. These symbols are shown below along with an explanation of their meaning.

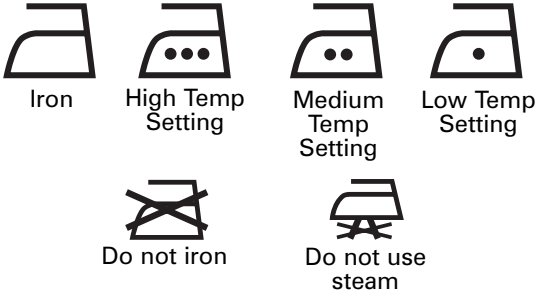

Meijer.com

Hot Dot Indicator

After the iron has been preheated (approximately 2 minutes after turning on the iron), the Hot Dot Indicator will gradually change from all black to red, and the word “HOT” will appear in the center of the dot in white letters. When the word “HOT” is no longer visible (approximately 35 minutes after turning off the iron) and the dot is all black again, the iron is cool enough to put away.

WARNING! Burn Hazard: The Hot Dot Indicator is a guideline only. Always avoid contact with the soleplate of the iron.

Due to usage conditions, the Hot Dot Indicator may stop working before the end of the iron’s useful life. It may start to remain red after the iron cools down. Replacement Hot Dot Indicators are available by calling 1.800.851.8900.

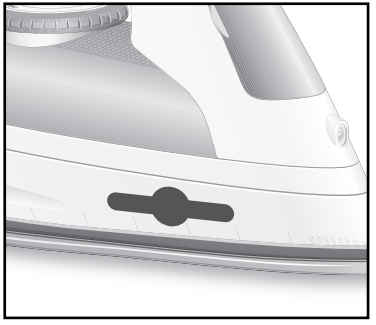

Iron is cool enough to store.

Iron is too hot to store.

Meijer.com

Tips for Best Ironing Results

FABRIC FACTS AND LABELS:

Every fabric is different and should be treated accordingly. The label inside clothing or linens should recommend fabric care instructions that include ironing treatment. As a general rule, these instructions should be followed. If the fabric is a blend, use a low temperature setting. If you do not know what the content of the fabric is, use the lowest temperature first and test on an inside seam.

PREPARE TO IRON:

1. Cover your ironing board with a padded, heat-resistant cover. Brush or wipe off any dust, dirt, or debris so it doesn't end up on your clothes.
2. To set the height of the ironing board, stand with your elbows bent at right angles; then drop your hands slightly so that your arms are in a comfortable position. Set the height of your ironing board to this height.
3. Check the soleplate (the surface of the iron that meets the fabric) for mineral deposits or scorched material before you begin ironing. If these deposits or minerals are left on the soleplate, they may end up on your clothes. Unsure? Test-glide the iron on a rag or old towel first.

TEST KITCHEN TIP: To clean an iron's soleplate, preheat the iron to the highest temperature setting and iron over a damp, 100% cotton cloth. This creates heavy steam that transfers grime from the soleplate to the cloth. Many irons have a Self-Clean Button. This will clean the steam holes, but it will not remove grime from the flat surface of the soleplate. **NOTE: Care should be used while cleaning; steam can burn.**

FAST FACTS:

- Don't iron in a circular motion as this can stretch fabric. Instead, iron lengthwise.
- Natural fibers such as cotton and linen should be ironed slightly damp for faster, easier ironing. If they are completely dry, use maximum steam while ironing or mist them with water prior to ironing.
- Any portion of a garment that has 2 layers of fabric such as pockets, seams, collars, and cuffs should be ironed inside out first.
- To press a collar, iron from the points in using small strokes of the iron. After wrinkles are pressed out, crease the collar into place by hand—not with the iron. Treat French cuffs similarly, gently creasing by hand after ironing.

IRONING VERSUS PRESSING:

- You may have heard the terms "ironing" and "pressing" used interchangeably, but they are actually quite different. When ironing, you slide the iron back and forth over fabric. When pressing, the iron is placed and held on the fabric in one spot, lifted up, and this process is repeated until the areas that need attention are smooth. A "pressing" technique is helpful to avoid stretching fabrics.
- A pressing cloth can help reduce unwanted "shine" on fabrics. You can purchase a pressing cloth in the laundry care section, or a clean white dishtowel or 100% cotton pillowcase works equally well. You do not need to increase the recommended iron temperature when using a pressing cloth.

Meijer.com

Care and Cleaning

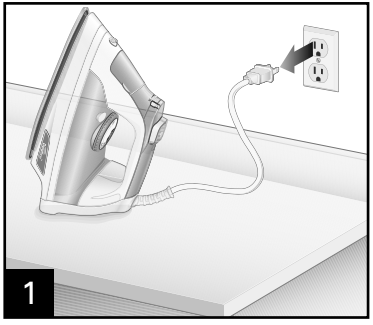

Allow iron to cool.

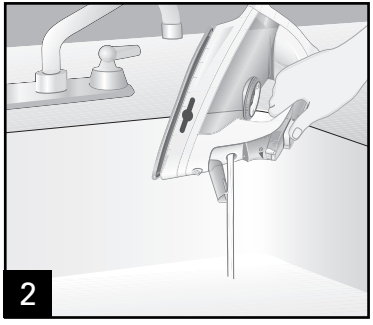

To empty water from iron, open the water tank cover and slowly tilt pointed end of iron over sink until water runs out.

Do not store iron laying flat on soleplate.

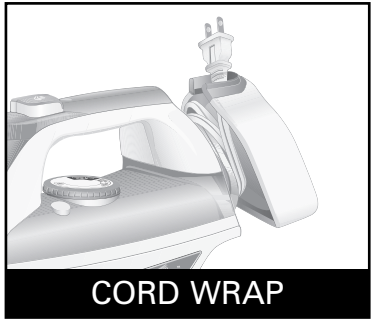

Optional feature on select models.

Soleplate Care

To clean an iron's soleplate, preheat the iron to the highest temperature setting and iron over a damp, 100% cotton cloth. This creates heavy steam that transfers grime from the soleplate to the cloth. Many irons have a Self-Clean Button. This will clean the steam holes, but it will not remove grime from the flat surface of the soleplate.

NOTE: Care should be used while cleaning; steam can burn.

NOTICE: To avoid damage to the iron soleplate:

- Never iron over zippers, buttons, pins, metal rivets, or snaps, since they may scratch the soleplate surface.
- Allow the iron to cool and wipe with a soapy, soft damp cloth to clean occasional buildup on the soleplate. Never use abrasive cleaners or metal scouring pads, since they may scratch the surface.

Meijer.com

Self-Clean Feature

To keep the steam vents clear of any buildup, follow these instructions each time you iron using steam.

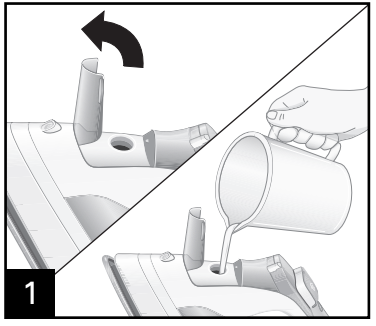

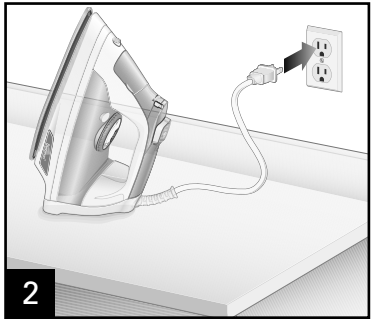

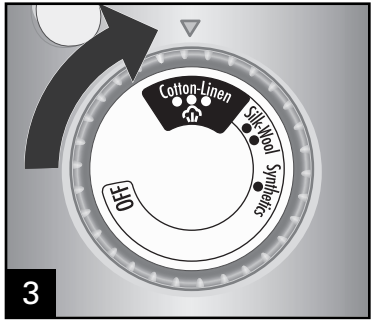

Turn Temperature Control Dial to **Cotton-Linen** ••• setting and let iron heat for 2 minutes.

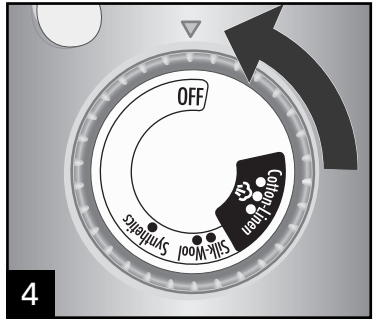

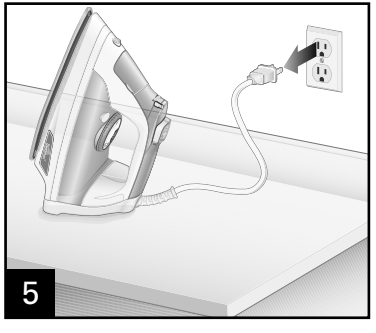

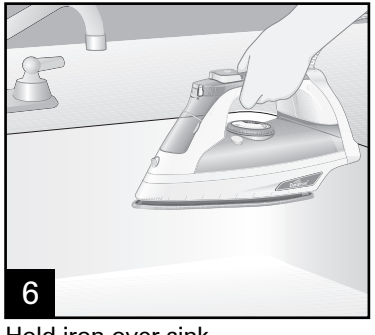

Hold iron over sink.

Press and hold the Self-Clean Button until tank is empty.

Meijer.com

Troubleshooting

PROBLEM	PROBABLE CAUSE
Iron won't heat.	• Is iron plugged in and the outlet working? Check outlet by plugging in a lamp. • Is the Temperature Control Dial turned to a fabric setting? • Is the Auto Shutoff/Power ON Light illuminated? Move the iron to reset.
Water is leaking.	• Do not overfill the water tank. • Adjust steam to a lower setting. • If steam ironing, is the Adjustable Steam Switch in a steam position? Is the Temperature Control Dial in the steam range? Did the iron have enough time to preheat? • If dry ironing, make sure the Adjustable Steam Switch is in the (Dry Iron) position.
Iron won't steam.	• Check water level. • Is the Adjustable Steam Switch in the (Steam) position? • Has the iron had enough time to preheat? • Anti-drip feature will not allow steam when temperature setting is in the dry range.
Iron leaves spots on clothing.	• ALWAYS empty water tank after using. Water left in tank may discolor clothing and soleplate.
Twisted cord.	• If the iron cord should become twisted, unplug iron and let cool. Hold iron cord in the middle of entire length. Let plug and iron dangle freely until cord uncoils. This will extend the life of the iron cord.
Wrinkles not removed.	• Check Temperature Control Dial is set to correct fabric.
Iron too hot/not hot enough.	• Check Temperature Control Dial and adjust to desired setting. Let iron cool down 5 minutes before continuing.

Meijer.com

Limited Warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase; in addition, the Durathon™ nonstick covering on the soleplate is warranted not to wear out for a period of ten (10) years from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.